

4.13 FACTORY CLEAR MODE

The printer has integrated counters to measure the accumulative activity of some features. These includes head counter, cutter counter and all counter. You have to reset the measurement of these counters to zero whenever the counterpart has been replaced. Selection and activation of the above Factory Clear modes are as shown below.

